## TROUBLESHOOTING:

| | Possible Cause | Corrective Action |
|---|---|---|
| Bulb will not light | 1. Bulb is burned out | 1. Replace light bulb |
| | 2. Switch is off | 2. Make sure switch is on |
| | 3. Faulty wire connection | 3. Check wiring |
| Fuse blows or circuit breaker trips when light is turned on | Crossed wires or power wire is grounding out | Check wire connections |

## PRODUCT MAINTENANCE:

1. To clean the outside of the lamp, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the lamp.

2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.

3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

**LIMITED WARRANTY**

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor expense costs involved in the replacement or repair of said product.**



# INSTRUCTION MANUAL

## INTERIOR 1-LIGHT PENDANT
## RAZZARI

**HOME DEPOT SKU 602-018 | S/O: 435-528 (UPC 773546217446)**
**CHROME FINISH**

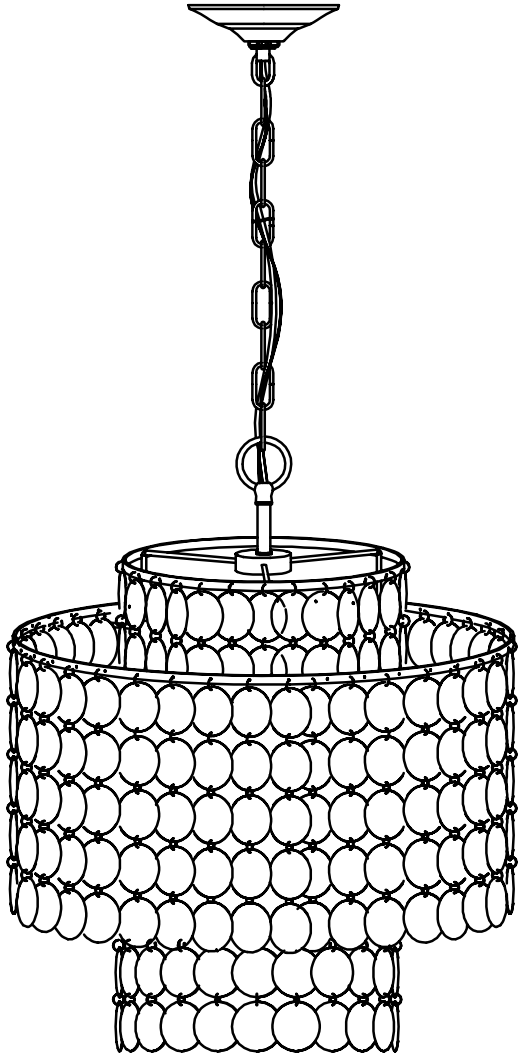

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

## FEATURES:

Refined capiz shell strands radiate a simple elegance to this fixture that complements any décor.

Standard 72” wire 60” chain for open entry-way and cathedral ceiling installations.

## QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 602-018 or (UPC 773546217446).**

## CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 602-018 or (UPC 773546217446).**

4. Keep your receipt and these Instructions for Proof of Purchase.



## INSTALLATION:

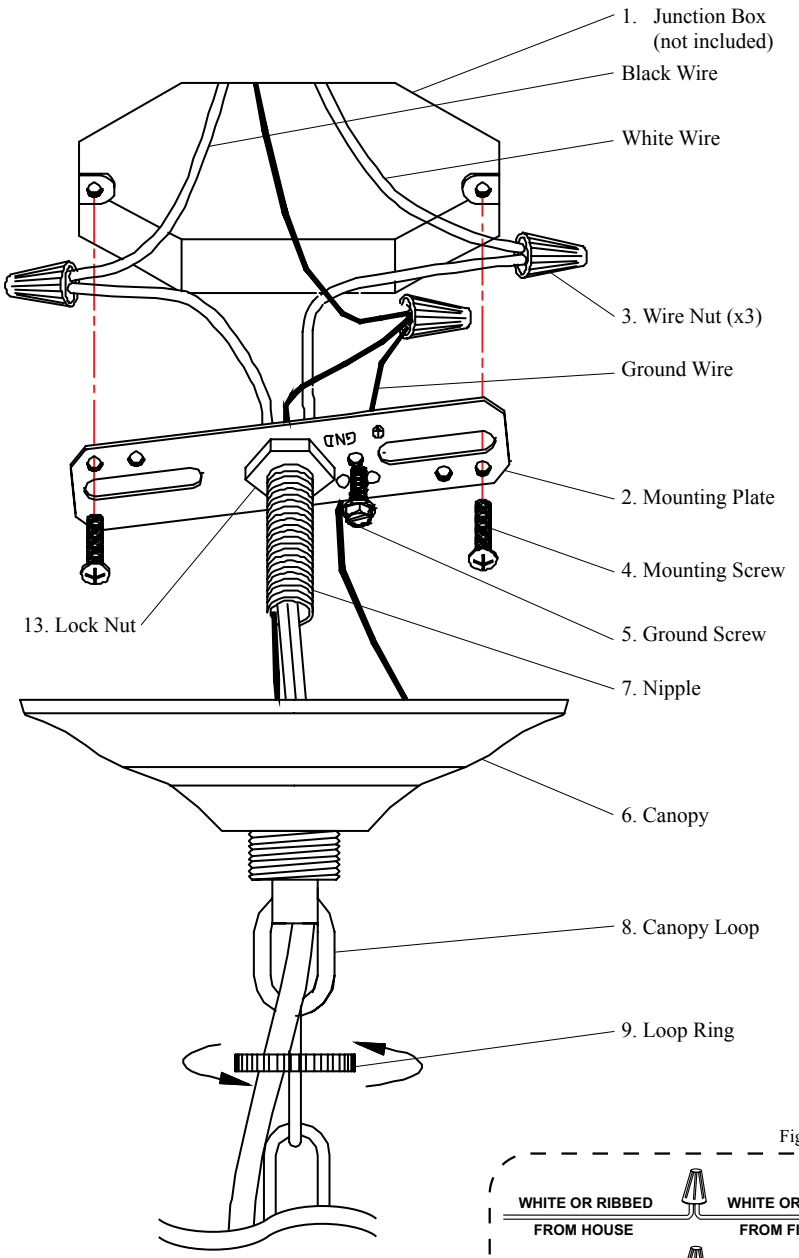


Figure #1

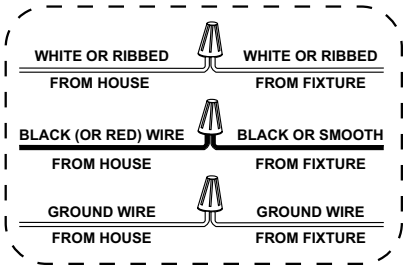

## ADDITIONAL PARTS FOR INSTALLATION (included):


2. Mounting Plate

3. Wire Nut (x3)


4. Mounting Screw (x2)


5. Ground Screw


6. Canopy

7. Nipple

8. Canopy Loop

9. Loop Ring

13. Lock Nut

## INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.
2. Tighten chain loop (10) onto fixture main body.
3. Install mounting plate (2) assembly complete with nipple (7) and canopy loop (8) to junction box (1) with 2 mounting screws (4) as one complete assembly.
4. Remove loop ring (9) from canopy loop (8). Slip canopy (6) over canopy loop (8) and secure by fastening loop ring (9). Adjust the height of the nipple (7) so canopy (6) will sit flat against ceiling and tighten lock nut (13) against mounting plate (2).
5. Remove loop ring (9) and canopy (6) from ceiling. Hold pendant up against canopy loop (8) with chain and adjust to desired height. Remove excess chain.
6. Before fastening chain onto canopy loop (8) weave pendant wire through every second link. Let the canopy loop ring (9) slip to the bottom of chain. Repeat this step for canopy (6).
7. Secure chain onto canopy loop (8). Weave wire through the canopy loop (8) and into junction box (1).
8. Install both ground wires of pendant (one from the canopy (6) and one from the lead wire of the pendant) to ground screw (5) or ground wire of junction box (1) or ground screw (5) on the mounting plate (2). (Ref. to Figure 1)
9. Connect black or other wire of power supply to the smooth side of the wire (flexible cord) from the pendant and connect white wire of power supply to the knobbed side of the wire from the pendant. (Ref. to Figure 1)

Note: always use wire nuts (3) marrettes (included) to connect wires and push all excess wire and connections back into junction box (1).

10. Lift canopy (6) up to ceiling covering junction box (1) and secure by using canopy loop ring (9).



## TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

Safety Goggles


Wire Stripper


Wire Cutters


Flathead Screwdriver


Phillips Screwdriver


Electrical Tape

Ladder

A19 Bulb 60W max. (not included)

## ADDITIONAL PARTS FOR ASSEMBLY (included):


10. Chain Loop


Strand (A)

Strand (B)

## ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; Layout all parts on a clean surface.
2. Tighten center pieces (A) and (B) onto frame.

## CAPIZ SHELL STRANDS AND BULB INSTALLATION:

1. Install 60W max A19 bulbs (not included).
2. Carefully unwrap one package of Capiz shell at a time.
3. Install alternatively the capiz shell strands (A) consisting of 8 pieces each onto the inner frame (11).
4. Install alternatively the capiz shell strands (B) consisting of 5 pieces each onto the outer frame (12).



## ASSEMBLY: